

LOMBARD

FIRE DEPARTMENT

GUIDELINES

FOR
RECREATIONAL FIRES

&

OPEN FLAME
COOKING DEVICES

RECREATIONAL FIRES

- CALL 630-620-5750
 prior to starting a fire.
 A burning ban may be in place due to weather conditions.
- Only dry seasoned wood is permitted to be used.
- Recreational fires cannot be conducted within 25 feet of a structure or combustible materials (including fences)
- Fires that are not in approved containers will be limited in size to 3 feet or less in diameter and 2 feet or less in height.
- Residents are prohibited from burning landscape waste such as leaves, shrub and grass clippings and tree limbs.
- Fires in approved containers (i.e. portable fireplaces) can be 15 feet from any structure or combustible materials but, cannot be placed on wood decks.



Example of Approved Container

- All recreational fires must be attended by an adult until extinguished.
- Means to extinguish the fire must be available for immediate use such as a fire extinguisher, dirt, sand, water barrel, and garden hose.
- Fires that produce offensive smoke or objectionable odors will be prohibited.
- Dial 911 to report a burning complaint**.
- Permanently placed outdoor fire pit and fire place structures will require pre-approval and a building permit.

**The commanding officer at the scene of a burning complaint is authorized to order the extinguishment of a fire which creates or adds to a hazardous or objectionable situation, or is in violation of the adopted codes and ordinances.

OPEN FLAME COOKING DEVICES

Charcoal grilles and other open flame cooking devices shall not be operated on combustible balconies or within 10 feet of combustible construction.

LP-gas grilles having a LP-Gas container with a capacity greater than 1 pound shall not be located on combustible balconies or within 10 feet of combustible construction.

The cooking device restrictions as listed above apply to multi-family structures only.

ANY QUESTIONS, PLEASE CALL THE LOMBARD FIRE PREVENTION BUREAU AT 630-620-5750